

For your safety, read and understand instructions completely before starting

■ Safety Warning


1. Cut off the power supply while replacing or maintaining the product in case of the electric shock.
2. Reconstruction of the product is not allowed in order to avoid the electric shock & fire accident.
3. When the unusual situation occurs, please cut off the power supply ASAP, and call the professional electrician to inspect it.
4. The input voltage range of the product is 120–277 VAC, Frequency is 60Hz.
5. Always have the installation performed by a licensed electrician.
6. The fixture cannot be covered by any type of insulation.
7. Please do not install the product in the inclined place or the unstable ceiling.
8. For indoor use only.

■ Installation


Step 1: Remove the screws from both ends of the fixture



Step 2: Remove the screws fixing the aluminum frame to the component housing

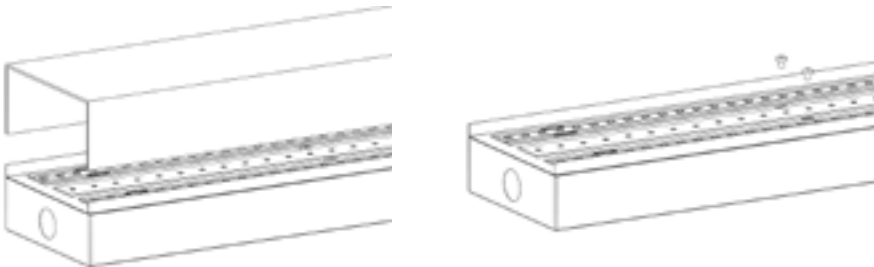


Step 3: Fasten the fixture to the wall using drywall screws and washers through two holes into anchors.
(Mounting Hole Distance 393 mm)

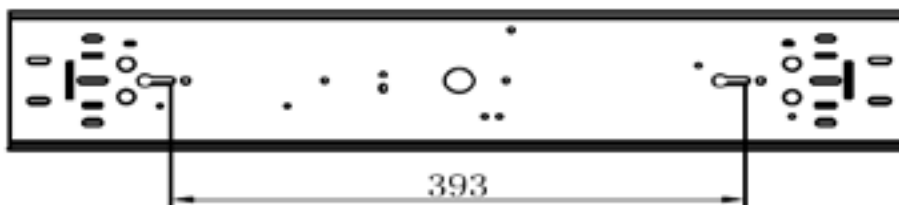

Step 4: Connect the plug from the emergency battery to the emergency driver
* Only for emergency back-up



Step 5: Connect the white/black and black wire to the AC line, the white wire to the neutral. Then put back the aluminum frame and lens into the fixture. (With non-emergency back-up option, there is no black wire.)

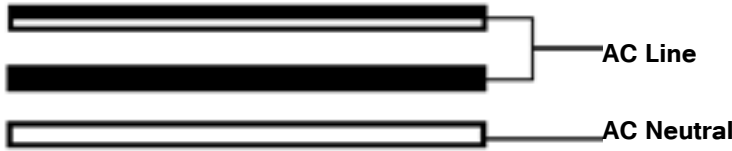

■ Maintenance

1. In order to lengthen the product usage time and maintain the brightness, the regular clean & maintenance is highly recommended. The fixture should be inspected every 3-5 years by a licensed electrician.
2. Please use the soft wet cloth to clean the product, and then dry the product by cloth.
(Attention: ballast, terminal block and other electrical components cannot be cleaned by water against the leakage or abruption.)

■ Setting by Remote Controller (Optional & Order Separately)

	ON=Normal on, after delay time turns to "AUTO" mode OFF=Normal off, after delay time turns to "AUTO" mode		
	Automatic ON/OFF		
	Detect area		Stand-by time before dimming
	Automatic reading and saving of the actual light level		Preselected light value-10 to 50 lux: Recommendation: rooms with daylight 50 @ lux, without daylight 10 @ lux
	Dimming level		Dimming time

- Step 1: Press the reset button to switch to default settings(The light should switch off and on after every step).
- Step 2: Adjust sensitivity to 50%.
- Step 3: Control the stand-by time before dimming. The default time is set to 5 mins.
- Step 4: Set the dimming level based on requirement.
- Step 5: Adjust the dimming time. The default time is set to 60 mins.