

T-Bar Mount Installation Instructions

■ For your safety, read and understand instructions completely before starting

Note: PreciseLED recessed fixtures are designed to meet the latest NEC requirements and are listed in full compliance with UL 1598. Before attempting installation of any recessed lighting fixture, check your local electrical building code. This code sets the wiring standards and installation requirements for your locality and should be understood before starting work. If fixture is to be switch from wall switch or dimmer, make sure black supply wire properly connected to switch or dimmer (follow switch/dimmer instructions).


■ WARNING:

1. Before wiring to power supply, turn off electricity at the fuse or circuit break box.
2. Insulation may be placed in direct contact with ANY part of the fixture.
3. Always have installation performed by a licensed electrician.


■ FIXTURE INSTALLATION

PART LIST


A Fixture	D Safety cable kit
B T-bar runner (by others)	E BX cable wire
C T-bar support flange	F BX Knockout plate

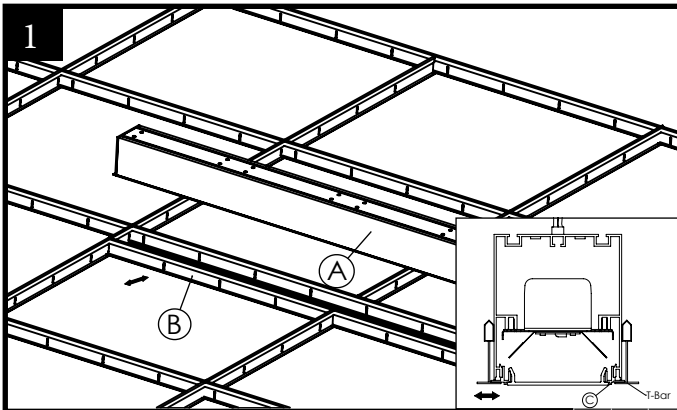


1. Adjust T-bar runner (B) to the fixture width. Raise fixture (A) above ceiling, place fixture T-bar support flange (C) onto flanges of T-bars runners (B) from the top.

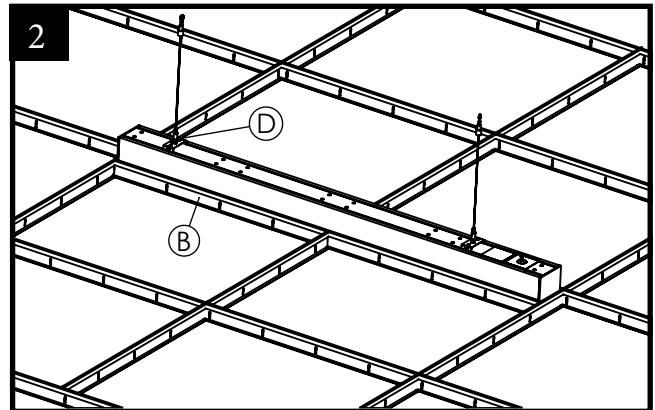

2. Secure the safety cable kit (D) to the fixture (A) and structure.

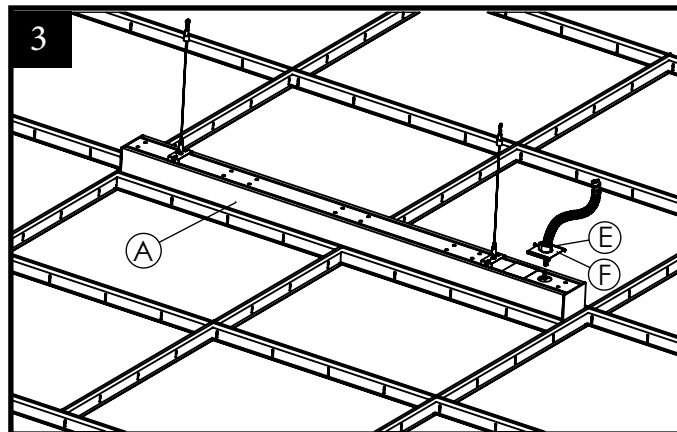

3. Install BX cable wire (E) into BX knockout plate (F), Wire BX cable wire (E) to fixture (A) using wire nuts.

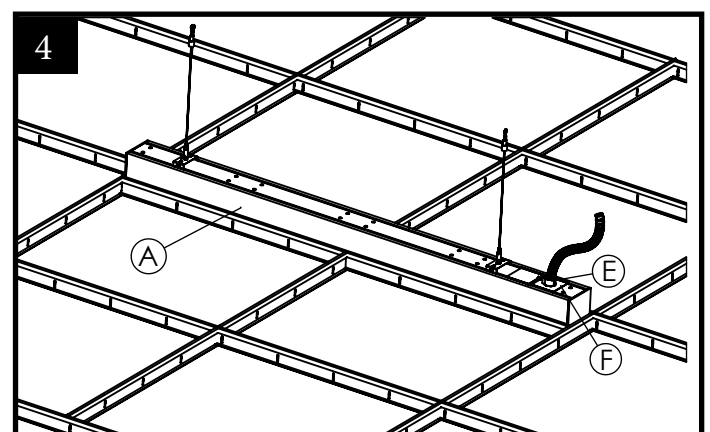

4. Secure BX knockout plate (F) to fixture