


!CAUTION!

To be used with Class 2 Power Units only.


Installation Instructions

Safety and Warnings


- National and local electrical code regulations should be kept in mind while installing the tape light.
- A qualified licensed electrician is intended to install this product.
- A compatible class 2 power supply must be used for this product.
- Avoid installing in direct sunlight as the LED chips can be damaged by it.
- Do not power the tape light while coiled in the plastic spool, excess heat can damage LEDs.
- Make sure the product isn't surrounded by anything conductive or not rated for high temperatures.
- Different tape light has different voltage ratings, make sure wire length and driver are compatible.
- Handle tape light with care, excessive bending and force can damage tape light.
- Not all tape lights are rated for outdoor/wet location use, check our website for specifications.

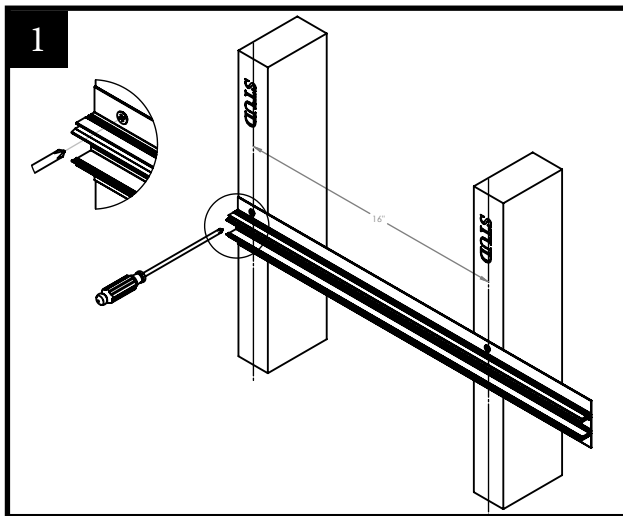

1. Place the ZENLITE® channel at the desired location aligning its holes with studs and trimming off the excess length at either side. Mount the channel with two M3x16 Flat head countersunk screws on each stud.

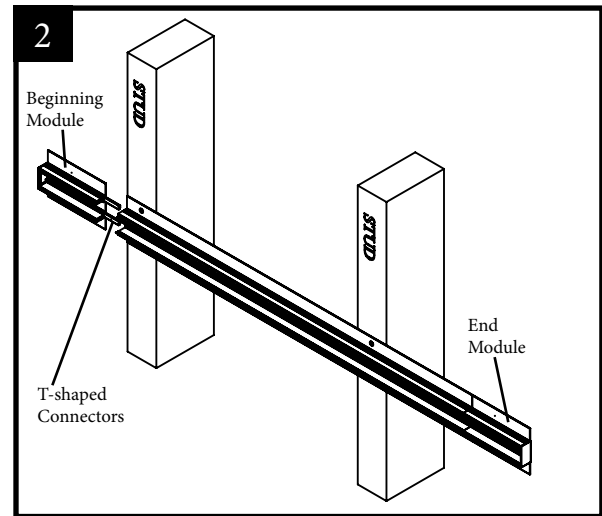

2. Attach beginning and end modules (provided) at each end of the channel with T-Shaped connectors (provided).

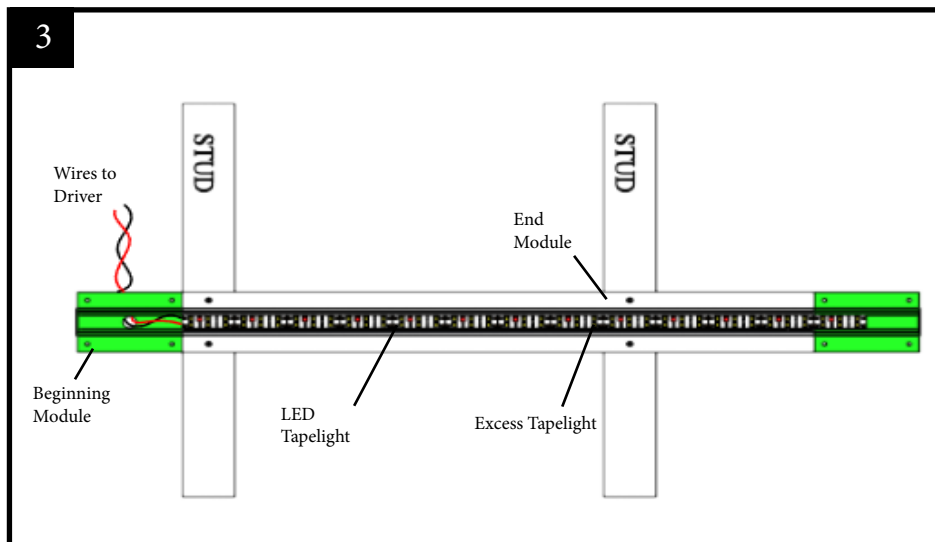


3. Install the tape light in the channel after testing it with the provided standard PreciseLED driver and removing its back adhesive covering. Make sure it is as close to centered as possible. Accommodate in the end module the extra tapelight that cannot be trimmed down to the desired length.

!CAUTION!

To be used with Class 2 Power Units only.


Installation Instructions

4

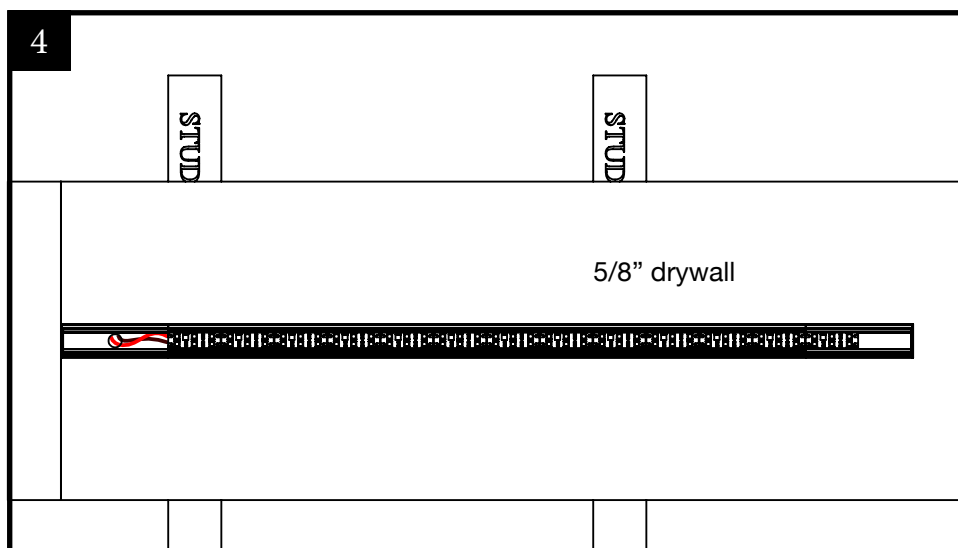


4. Install 5/8" drywall with appropriate screws.

5

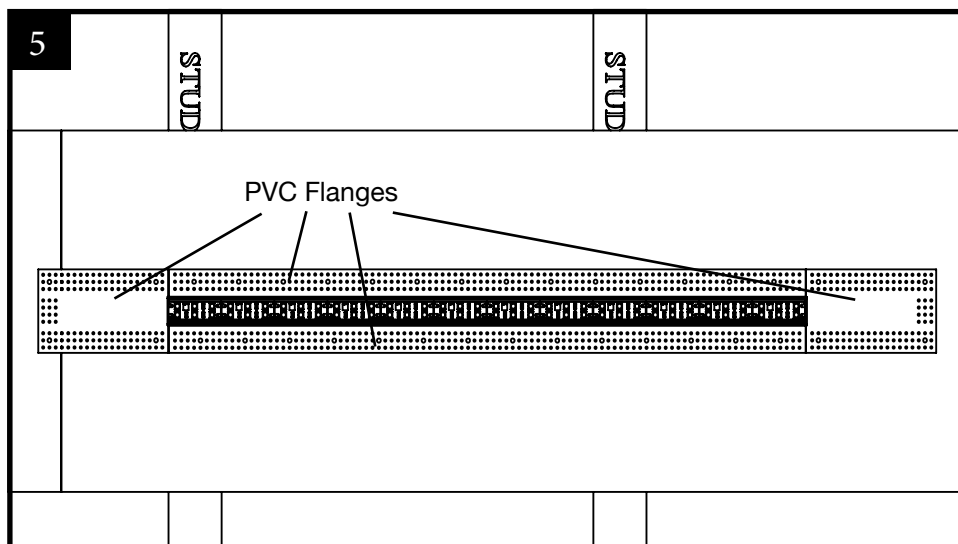

5. Install the provided PVC flanges over the sides of the ZENLITE® channel and end modules. Use M3 Flat head countersunk screws to mount the flanges with the 5/8" drywall/sheet rock.

6

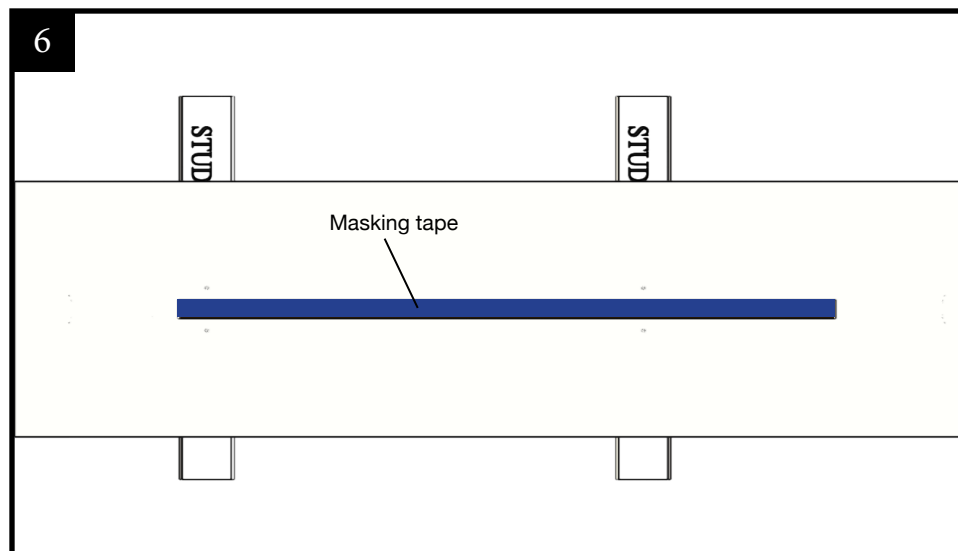


6. Before spackling and applying the finishing plaster, apply masking tape on the inside of the ZENLITE® channel.


!CAUTION!

To be used with Class 2 Power Units only.


Installation Instructions

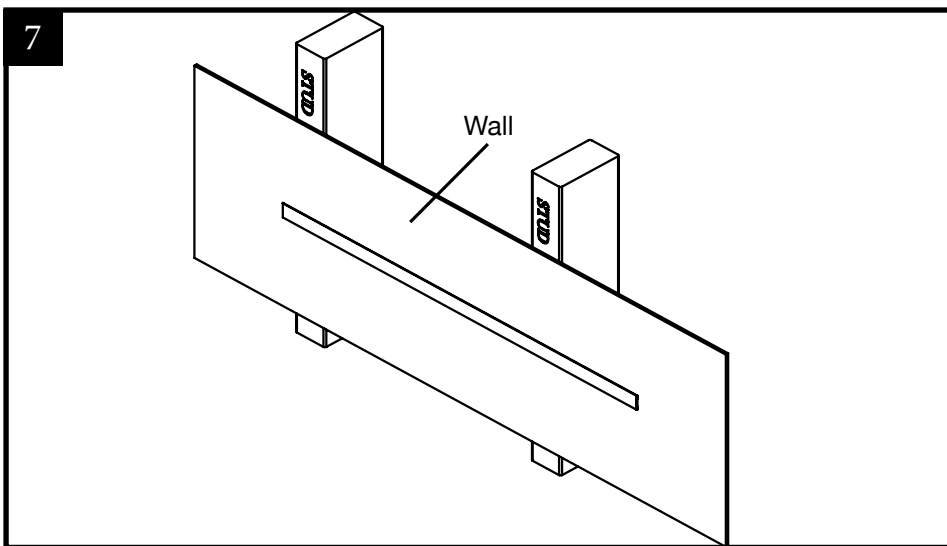

7. Remove the masking tape. Make sure there is no residual paint or plaster left inside the enclosure. If necessary, clean the inside of the fixture with a dry cloth.

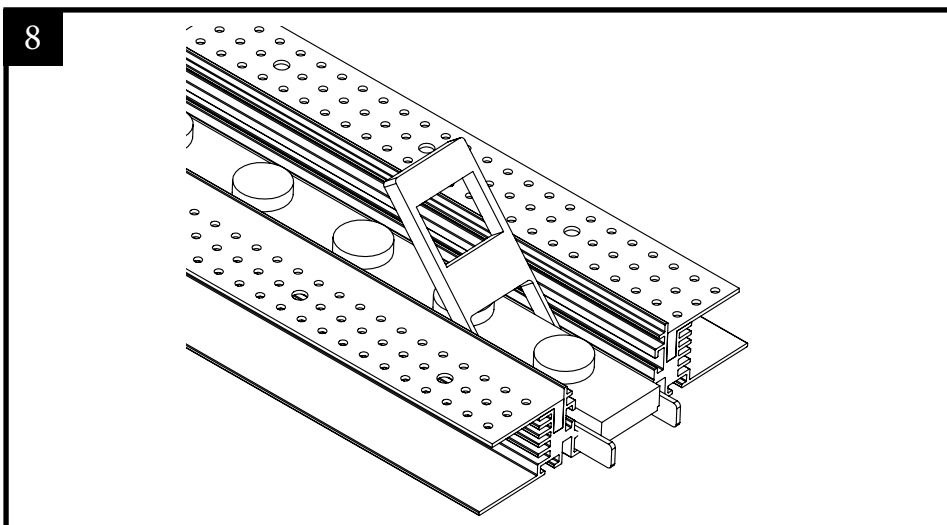

8. Use the provided centering tool to insert the Louvre tapelight correctly in the channel. Insert the centering tool into the channel, and pull it along the length of channel, with the tape between its legs. For further information on how to use the centering tool, look at the Zenlite Louvre Centering Tool Instruction Guide on our website.

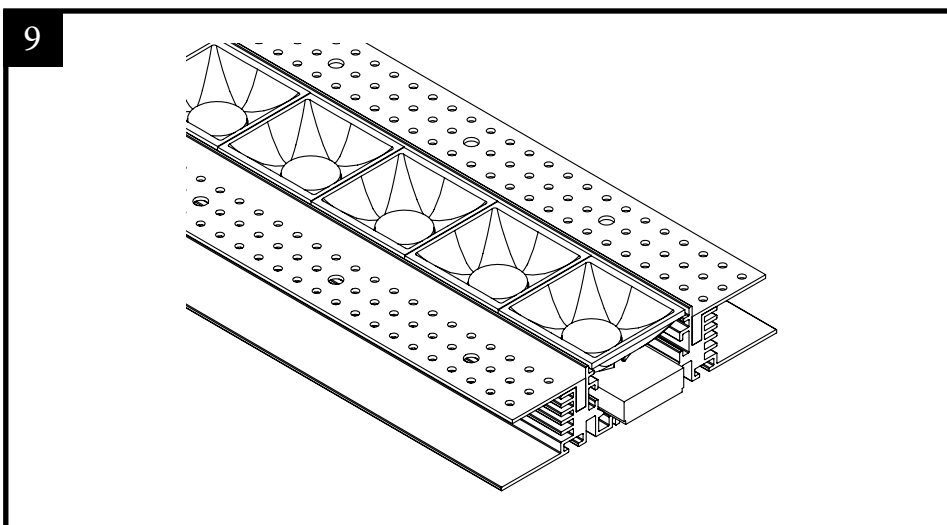

9. Lastly, snap in a trim for each diode. Make sure to press down on one side and then the other.