


- For your safety, read and understand instructions completely before starting installation


**Note:** PreciseLED fixtures are designed to meet the latest NEC requirements and are listed in full compliance with UL 1598. Before attempting installation of any lighting fixture, check your local electrical building code. This code sets the wiring standards and installation requirements for your locality and should be understood before starting work. If fixture is to be switch from wall switch or dimmer, make sure black supply wire properly connected to switch or dimmer (follow switch/dimmer instructions).

■ **WARNING:**


1. Before wiring to power supply, turn off electricity at the fuse or circuit break box.
2. Insulation may be placed in direct contact with ANY part of the fixture.
3. Always have installation performed by a licensed electrician.

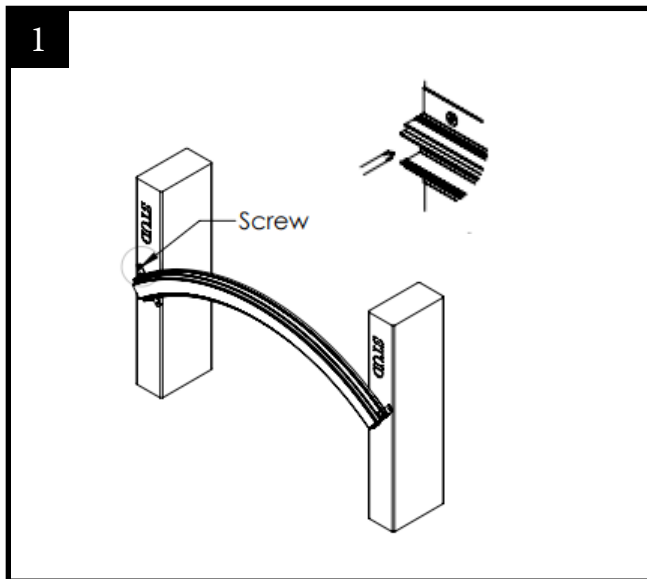

1. Place the ZENLITE® ARC channel at the desired location aligning its holes with studs and trimming off the excess length at either side. Mount the channel with two M3x16 Flat head countersunk screws at each stud.

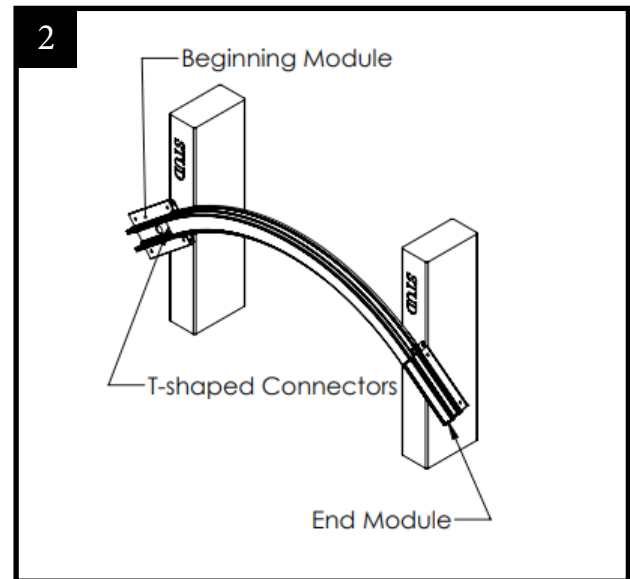


2. Attach Beginning and end modules(Provided) at each end of the channel by means of T-Shaped connectors(Provided).

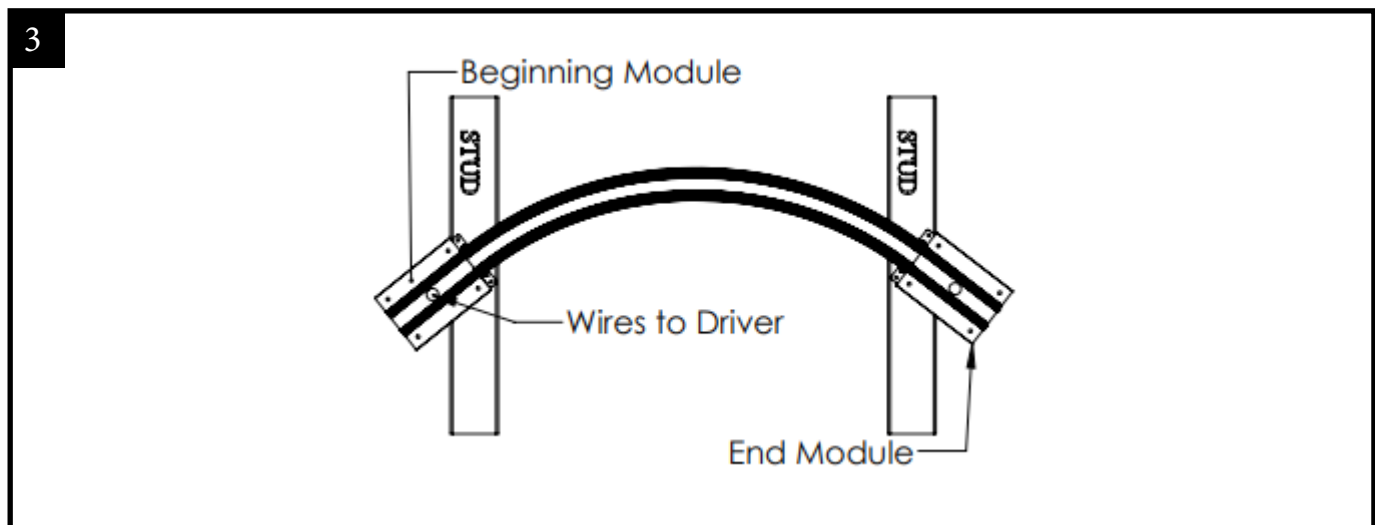


3. Install Tape light as shown in figure 3a. Accommodate in the end module the extra tapelight that cannot be trimmed down to the desired length.

# ZENLITE® ARC2


## Instruction Sheet

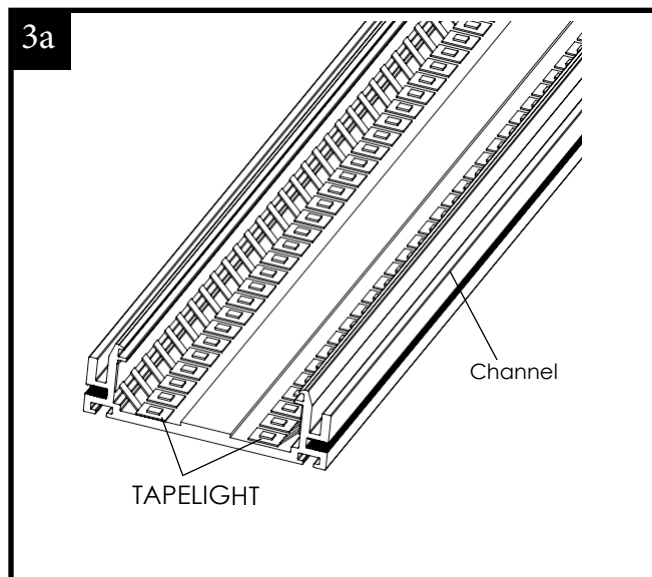


3a. Install Tape light at the sides of the channel, using the standard PreciseLED driver, by removing the back adhesive.

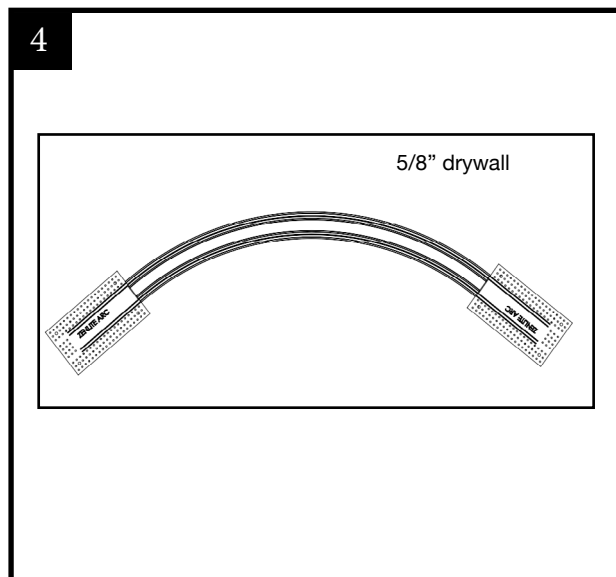

4. Install 5/8" drywall with appropriate screws in aesthetic finish.

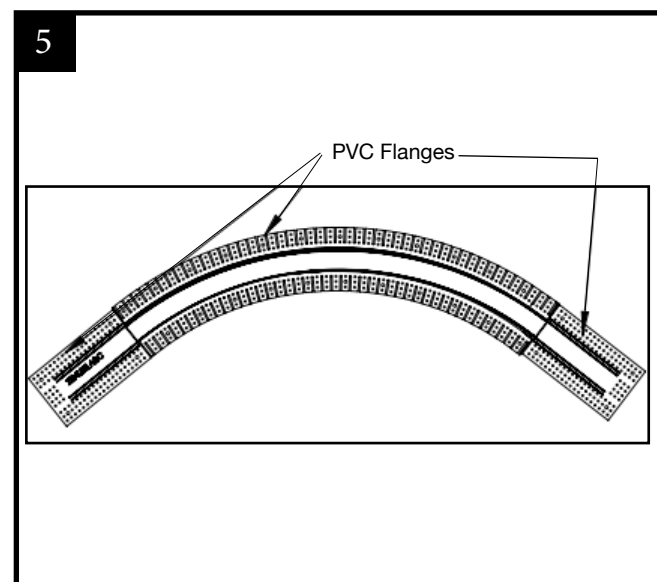


5. To mount the flanges Use M3 Flat head countersunk screws flushed with the 5/8" drywall/sheet rock and then Install the provided PVC flanges over the sides of the channel and end modules for smooth edge finish.

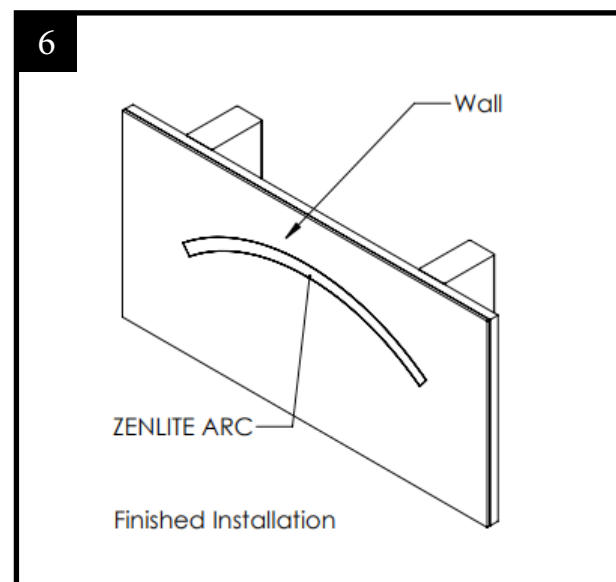

6. Once the enclosure is properly secured apply a fine quality plaster to give the final touch to the wall and then install the provided lens in place.

## ■ INSTALLATION FOR ARCBEAM TAPELIGHT

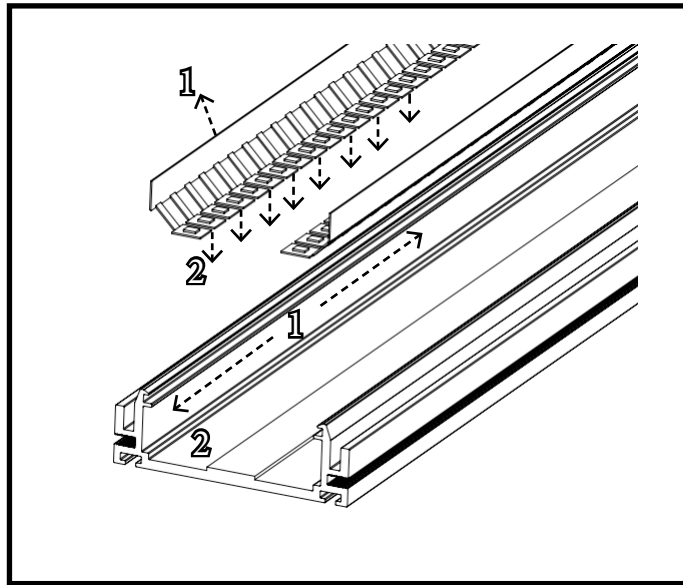


Step 1: Peel off the adhesive backing of the tape.

Step 2: Place the diodes carefully and stick them onto the back of the channel as shown in the illustration above.

Step 3: Repeat steps 1 and 2 for the opposite side of the channel.

Note: The diodes should be spaced evenly onto the channel for even distribution of light.

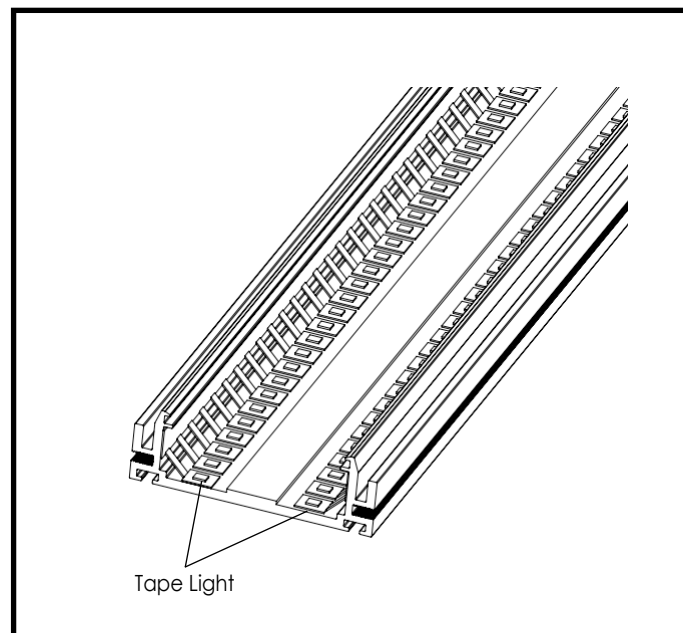

# ZENLITE® ARC2

## Instruction Sheet

### WIRING DIAGRAM

